


## M7208 Digital Deskphone layout

This section describes the location and function of the buttons and other features on the face of the M7208 Digital Deskphone.


### M7208 layout

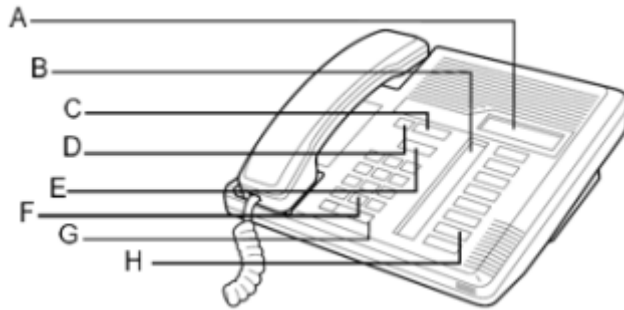

<b>A</b>	Display	Shows the time, date, and call information.
<b>B</b>	Indicators	Appear beside active lines and features.
<b>C</b>	Feature button	Starts or ends a feature.
<b>D</b>	Release button	Cancels an active call.
<b>E</b>	Hold button	Places an active call on hold.
<b>F</b>	Dial pad	Used to dial features and extension.
<b>G</b>	Volume control	Adjusts handset and ringer volume.
<b>H</b>	Memory and line buttons	Used to store frequently used telephone numbers to the phone memory.

### Using display buttons

Three display buttons appear directly below the display. When active, these buttons appear in capital letters on the second line of the display. In this guide, display buttons appear as underlined, capital letters: for example, OK.

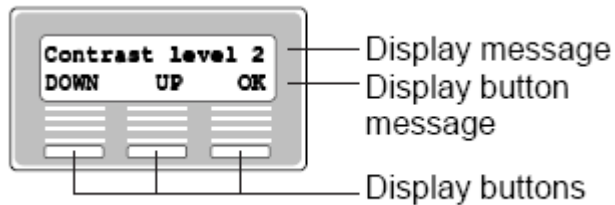

## Telephone Setup

Use the following tasks to set up the M7208 Digital Deskphone.

### Adjusting the contrast level

Use the following task to adjust the contrast level of the LCD display.

1. Press **Feature \* 7**.
2. Press **1** through **9** to select the contrast level. The higher the number, the higher the contrast level.


## Changing the ring type

Use the following task to change the ring type on the telephone.

1. Press **Feature \* 6**.
2. Press **1** through **4** to select the ring type. A preview tone is played.
3. Press **Feature** to store the ring type.

## Programming memory buttons

Memory buttons are buttons with indicators not assigned as line, intercom or handsfree buttons. Memory buttons store internal and external numbers or features to give you one touch dialing or feature activation. Avaya IP Office supports duplicate programming. For example, you can program a single feature or number to multiple memory buttons.

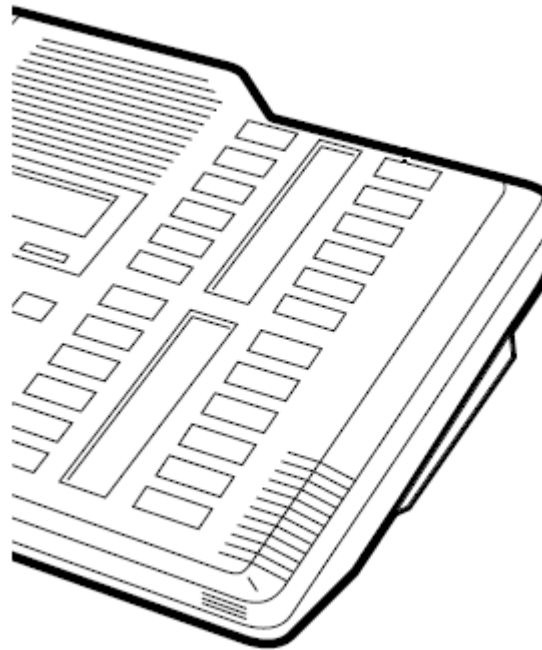

support@broadconnect.ca  
877-228-6616

## M7208 Digital Deskphone for IP Office Quick Reference Guide

### Programming an external autodial number

You can program a memory button with a new number or feature.

1. Press **Feature \* 1**.
2. Press the memory button you want to save the number to.
3. Dial the external number you want to save to the memory button.
4. Press **Hold** to store the number to the telephone memory.
5. Label the memory button.

### Programming an internal autodial number

You can program an internal autodial number to a memory button.

1. Press **Feature \* 2**.
2. Press the memory button you want to store the number to.
3. Dial the extension you want to save to the memory button. If a valid number is entered, it is saved automatically.
4. Label the memory button with a button label strip.

### Programming a feature code — method 1

You can program a feature code to a memory button.

Feature	IP Office Standard Version	IP Office Quick Version/ PARTNER Version/Norstar Version
Personal Speed Dial	Feature 0, *00 to *99	#80 to #99 (also Feature *4, 80 to 99).
System Speed Dial	Feature 0, 001 to 999	Feature 0, 600 to 699
Ring Again (Set/Clear)	Feature 2 / Feature #2	AutCB works on phones with soft keys.
Conference	Feature 3	Feature 3
Forward All On/Off	Feature 4 / Feature #4	Feature 4 / Feature #4
Last Number Redial	Feature 5	Feature 5
Page	Feature 60	Prefix * to the extension/ group number.
Retrieve Messages	Feature 65 or Feature 981	777 (own mailbox) or 778 (mailbox select)
Dial Voice Call	Feature 66	Prefix * to the extension/ group number.
Priority Call	Feature 69	Not supported
Transfer	Feature 70	Feature 70
Call Park	Feature 74	Transfer call to own extension number.
Call Unpark	Feature #74 <park slot ID>	6<extension number (whoever parked the call)>
Call Pickup Group	Feature 75	66<pickup group number>
Direct Call Pickup	Feature 76	6<extension number>
Do Not Disturb On/Off	Feature 85 / Feature #85	Feature 85 / Feature #85
Group Listen On/Off	Feature 802 / Feature #802	Not supported
Call Log	Feature 812	Feature 812
Button Inspect	Feature *0	Use button programming.
Speed Dial Button	Feature *1	Use button programming: Auto Dial — Other
Internal Auto Dial	Feature *2	Use button programming: Auto Dial — Intercom
Button Programming	Feature *3	Feature *3

Feature	IP Office Standard Version	IP Office Quick Version/ PARTNER Version/Norstar Version
Store a Personal Speed Dial	Feature *4	Feature *3, Feature *480 to *499.
Ringer Sound	Feature *6	System Admin function only
Contrast	Feature *7	Feature *7
Ring Volume	Feature *80	Feature *80
Enbloc Dialing On/Off	Feature *82	Not supported Hot dial only.

1. Press **Feature \* 3**.
2. Press the memory button you want to save the feature to.
3. Press **Feature** and enter the feature code. The feature code is saved automatically.
4. Label the memory button with a button label strip.

### Programming a feature code — method 2

You can program a feature code to a memory button.

1. Press **Feature \* 3**.
2. If prompted for a security code, enter your Hot Desking Login password.
3. Scroll (using the ">>>" softkey or Volume Up/Down) through the features list to find the feature you want to save to a button
4. Press **Selct** or **HOLD** at the feature you want to program.
5. Press the memory button you want to save the feature to.
6. If prompted with the existing programming on this button, press **Repla** or **HOLD** to program the button. Press **Back** or dial-pad '0' to cancel without saving the programming, and return to the selected feature.
7. Repeat steps 3 through 6 for each additional button you want to program. Press **Rls** when finished.
8. Label the programmed button with a button label strip.

### Resetting memory buttons to default feature code programming

You can return all programmed feature buttons on your phone to the default feature programming for your phone model.

1. Press **Feature \* 3**.
2. If prompted for a security code, enter your Hot Desking Login password.
3. Press \* twice.
4. Press **Prog** or **Hold** to return all feature buttons to the system defaults.
5. Label the programmed button with a button label strip.

### Erasing a memory button

You can delete the current memory button programming to reprogram it with a different number or feature.

1. Press **Feature \* 1**.
2. Press the memory button you want to erase.
3. Press **Hold** to delete the current memory button programming from the telephone memory.

### Displaying memory button programming

Use the following task to display the telephone number or feature currently programmed to the memory button.

1. Press **Feature \* 0**.



## M7208 Digital Deskphone for IP Office Quick Reference Guide

2. Press the memory button you want to check.
3. Press **Feature** again to clear the LCD screen.

## Making and answering calls

---

Use the following tasks to make and answer calls on your M7208 Digital Deskphone.

### Making external calls using line buttons

Use the following task to make a call to an external telephone number using a line button.

1. Lift the handset
2. Press a line button.
3. Dial the external telephone number.

### Making external calls using intercom buttons

Use the following task to make a call to an external telephone number using an intercom button.

**Note:**

Contact your system administrator for a list of external dialling codes.

1. Lift the handset
2. Press an intercom button and enter an external dialling access code.
3. Dial the external telephone number.

### Making internal calls using intercom buttons

Use the following task to make a call to an internal extension using an intercom button.

**Note:**

Contact your system administrator for a list of extension numbers.

1. Lift the handset
2. Press an intercom button.
3. Dial the extension number.

### Answering calls

An incoming call is available to be answered when your telephone rings and the display light flashes, or when an intercom or line button indicator flashes.

When an incoming call appears on your telephone, lift the handset  
OR

Press the button with the flashing indicator before you lift the handset.

### Placing a call on hold

Use the following task to place an active call on hold.

**Note:**

Calls are put on hold automatically when you switch from one line to another.

1. While on a call, press **Hold** . The indicator for the line will flash.
2. Press the line button with the flashing indicator to retrieve the call.

### Muting a call

You can mute your voice on an active call. This task applies to handset, handsfree, and headset calls.

1. While on a call, press **Handsfree/Mute** to turn the microphone off. The indicator light next to the Mute button flashed when the microphone is muted.
2. Press **Handsfree/Mute** again to turn the microphone on.

### Making a handsfree call

You system administrator must program the handsfree feature on your telephone. The handsfree button is programmed to the bottom right memory line button.

Press the handsfree/mute button on your telephone to make or answer a call.

OR

To switch to handsfree/mute when you are on a call, press the handsfree button and place the handset on the cradle. Lift the handset off the cradle to turn off handsfree mode.

March 2011



## M7208 Digital Deskphone for IP Office Quick Reference Guide